


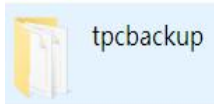
HMI Program Update Instructions

Prepare the hardware

- 1、 U disk: formatted as **FAT32**

Operation


- 1、  HMI-V1.1 After decompressing the program archive, copy this file **Folder to the root directory of the U disk.**




- 2.Insert the U disk into the USB1 port, as shown below




3. Click "**YES**" in the pop-up dialog box, as shown below

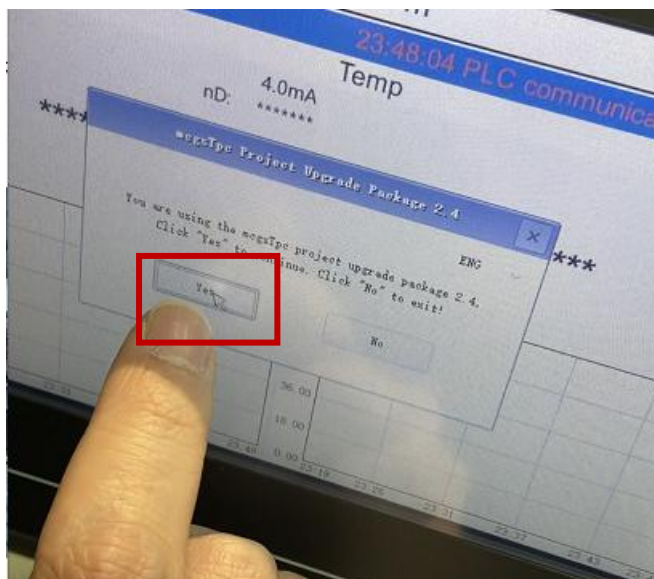

4. After the dialog box pops up, please click "**Download Project**", as shown below

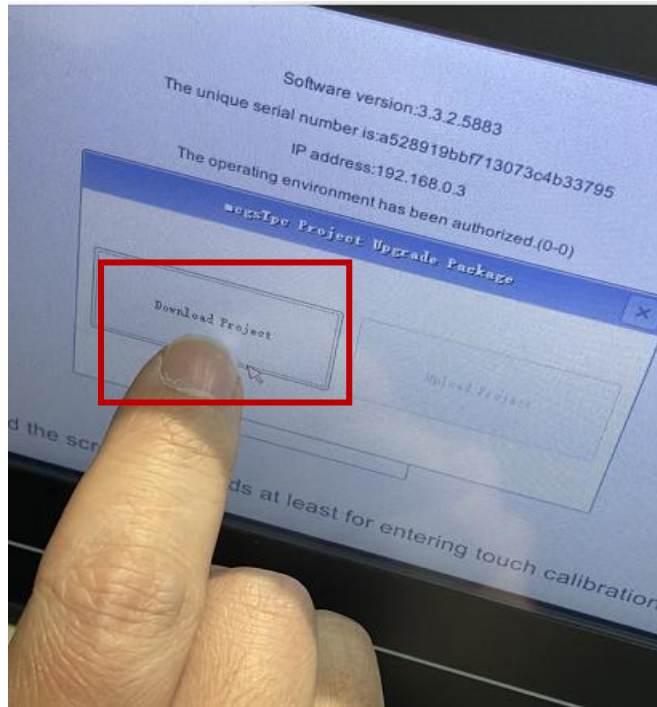

5. After the dialog box pops up again, click "**Download**", please wait for the program update to complete and the HMI to restart

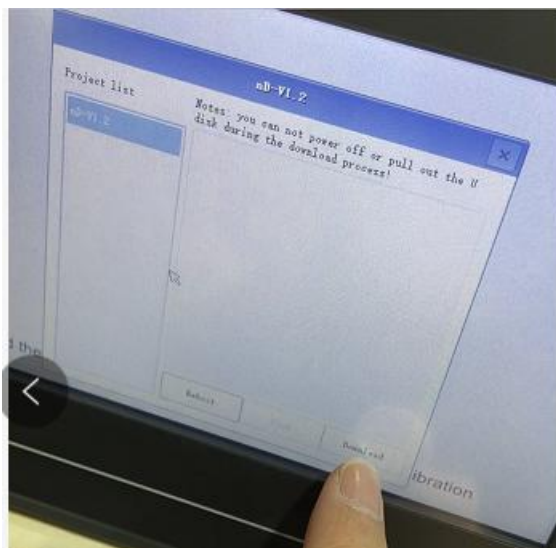

6. During the HMI restarting process, you can pull out the U disk. If it is not pulled out, when the update screen appears again after restarting, please click "NO" to pull out the U disk.

